

IFS Part #91902
Offset Kit, Frame Rail Unit, 2"


The 2" Offset Kit is used to mount the APU or the HVAC Unit to the trucks frame.

The 2" offset is required when the space for mounting the APU or the HVAC Unit is not available due to obstacles on the frame.

The Offset Kit includes 2 "Z" brackets and all of the needed hardware to mount the APU to the truck's frame.

The Offset brackets can be used to spread the mount to the outside of the APU or HVAC unit, or they can be used to mount to the truck's frame toward the inside, of the trucks frame, behind the APU.


The Offset brackets can be used in any manner that will enable the APU to me secured to the trucks' frame.

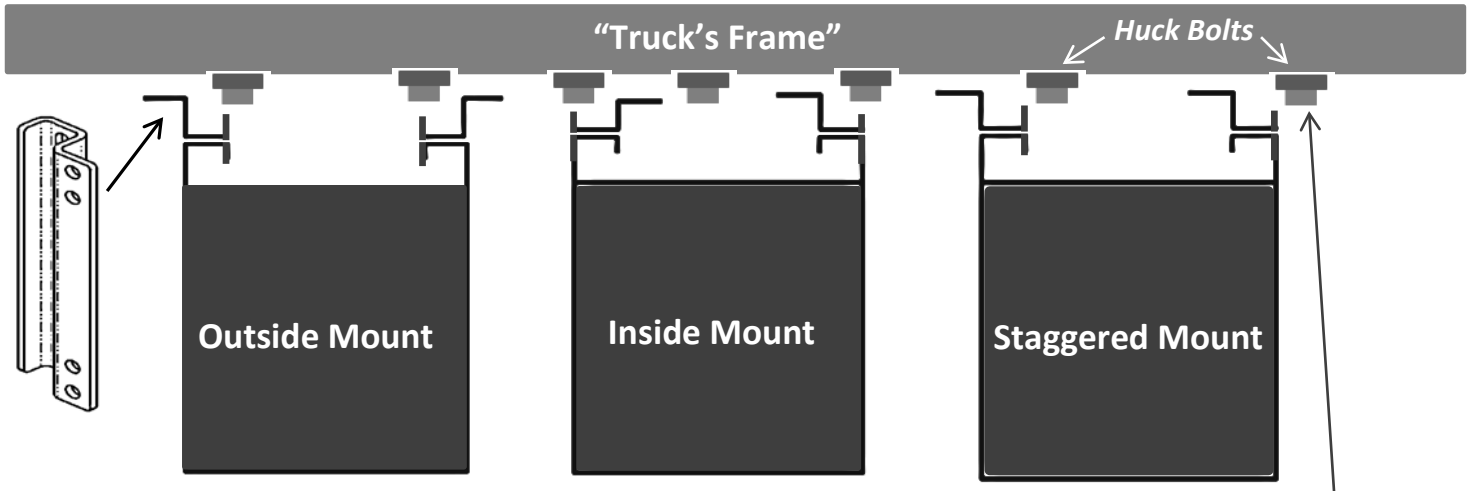

3 Top Views of APU using different configurations

Huck Bolts, can extend 2.75 inches from the truck's frame.

Top View of Offset Bracket

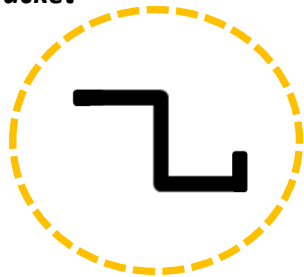

Offset bracket, Kit contains 2 Brackets and the needed mounting bolt sets